

FARM HOUSE BOLT

88-509




John Wright Company
P.O. Box 269
Wrightsville, PA 17368
800-444-9364
www.jwright.com

Slides bolts are a traditional way to hold shutters closed.



John Wright combines modern high-quality finishes with the strength and traditional look and feel of cast iron. Slide bolts are mounted on the inside of the shutters and positioned to be reached from inside the home through the window opening. They have two halves: the bolt and the catch. The bolt mounts to one shutter and the catch mounts to the other. The bolt engages the catch, locking the shutters closed and together.

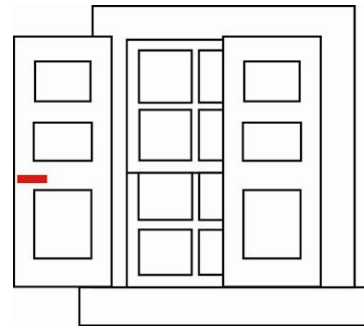


- Sold in individually and include screws for mounting
- Includes anti-rattle springs for reduced noise in windy conditions
- Sliding bolt is easily field-removable to allow painting of custom colors
- Material: cast iron with steel screws
- Finish: WeatherWright™ coating process. This multi-step coating provides long life in outdoor environments while offering excellent value. It including both zinc electroplating and black-matte TGIC powder coating. Zinc plating provides far more protection than powder coating alone. The zinc layer is not only abrasion resistant but offers cathodic protection to small areas of powder coating that may be accidentally damaged during installation. Tested to withstand a minimum of 144 hours of salt spray with no visible red-rust corrosion. All fasteners and hardware meet this same standard.
- Warranty: 1-year replacement
- Optional and related items:
 - #88-550 or 88-449 Shutter Pull Rings are helpful to make using slide bolts much easier. Pull rings allow the shutters to be easily pulled and held closed so the slide bolt can be latched.

Installation

1. Close both shutters. Secure them closed with tape, a wood block, or have a helper hold them.

2. From inside, open the window and position the bolt on one shutter and the catch on the other shutter, with the slide bolt engaging the catch. The edges of the bolt or catch should not stick out past the edge of the shutters. The slide assembly should be readily accessible from inside but also as close to the vertical middle of the shutter as possible. Make sure the slide is level and that both sides are exactly aligned. Failure to do so may cause binding. Mark the locations of the screw holes. Do not install screws yet. Note that the slide can be installed before the shutters are hung or the shutters can also be removed for installation.
3. Install the anti-rattle springs at the locations shown and with the rounded part of the spring facing up. Drill 1/16" pilot holes and install the screws.

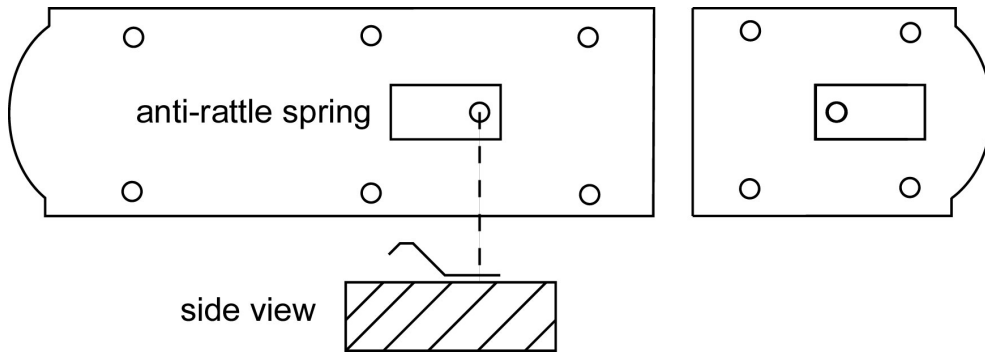

4. Drill 1/16" pilot holes at the locations you marked for the bolt and catch. Place the bolt and catch over the springs and screw them to the shutters. Test the operation.

Contents and Dimensions

- (1) bolt half (bolt and holder)
- (1) catch half
- (2) anti-rattle springs
- (12) No. 6 by 1" long Phillips-head screws

