


Hinge Shim Kit Instructions

This shim kit is used with John Wright's offset strap hinges and New York style hinges (#88-625, -626, -510, -511, -512, and -514). The shims are mounted behind the hinge pintle plate and increase its offset. The total throw of the hinge-pintle combination is also increased. This can expand your mounting options and provide more clearance. Please see our catalog for further discussion of offset and throw concepts. Each shim kit consists of:

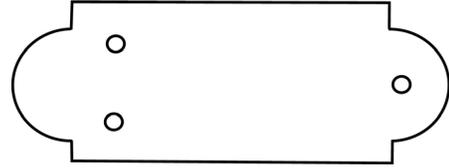

- (3) shim plates
- (3) 2" black-zinc screws

Place the hinge pintle plate in the desired location and mark the position of the screw holes. Please note that wood screws are provided with the shim kit. If you are mounting to another material, additional screws or anchors may be required. Drill a 1/16" pilot hole at the locations you marked. You may use one, two, or three shim plates, depending on the desired increase in offset. Use of more than three shim plates for a single pintle is not recommended. Place the shim(s) behind the pintle plate and install the provided 2" screws through the pintle and shim(s). The mounting surface should be wood of sufficient thickness and strength for the intended load. Do not install screws into vinyl siding, cement board, hardboard, or other materials of insufficient strength.